

Assembly Instruction Sheet #IS-9613C18-4

For Style 9613C18-4

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (4) E26 Base Bulb 60W Maximum (Not Include)

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture.

We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

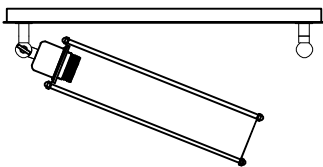

A Fixture Body x1



B Decorated Socket Holder x1

Hardware Contents

PART	DESCRIPTION	QUANTITY
AA	Decorative Caps	4pcs
BB	Electrical Marrets	2pcs
CC	Outlet Box Screw	2pcs
DD	Mounting Screw	4pcs
EE	Mounting bracket	1pcs



STEP 2 - Attach Mounting bracket to Outlet Box

A. Pass the supply wires through the Mounting bracket (EE).

Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw facing you.

Secure it with Outlet Box

Screws.

Tighten until snug.

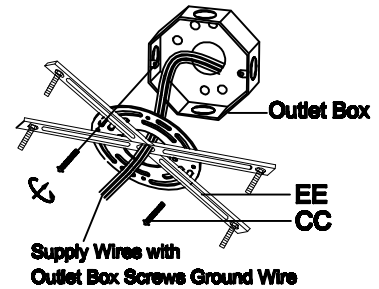


Figure 2

STEP 1 - Attach Mounting Screws, Lock Washers and Hex Nuts to Mounting bracket.

A. Line up a set of holes on the Mounting bracket (EE) and Holes on the ceiling canopy.

Thread Mounting Screws (DD)

into the holes on the

Mounting bracket (EE). Pass Lock

Washers and thread Hex

Nuts onto the Mounting

Screws (DD).

Hand tighten until snug.

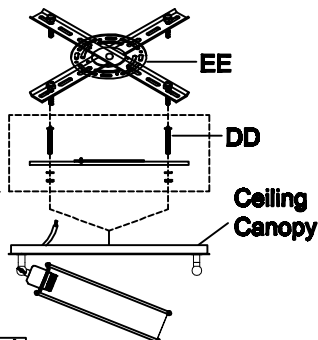


Figure 1

STEP 3 - Fit Ceiling Canopy to Mounting bracket Assembly

A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Decorative Caps (AA). Note: The ceiling canopy should be snug against the ceiling and the Decorative Caps (AA).

If not, adjust the length of the

Mounting Screws (DD) by

unscrewing the Hex Nut

and Lock Washer and

then screwing Mounting

Screws (DD) in or out of the

Mounting bracket (EE) until the

correct length is achieved.

Once the ceiling canopy is

secure, remove the Decorative

Caps (AA)

and ceiling canopy

and proceed to Step 4.

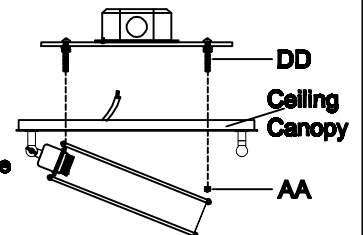


Figure 3